




MACO Homee set-up

Connect a power supply

Using the supplied USB cable, connect your MACO homee to a power supply to turn it on.

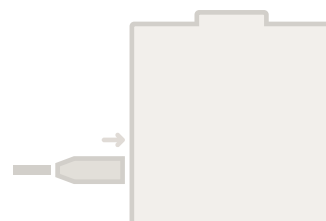


Install the homee app

Download the free to install homee app for IOS or Android. Additionally, you can use the Web App, accessible at www.homee.de(My homee).


Open the homee app

Open the homee app and press the “Set-up homee” button. The app’s language setting will automatically be determined based on your phone’s language configuration.

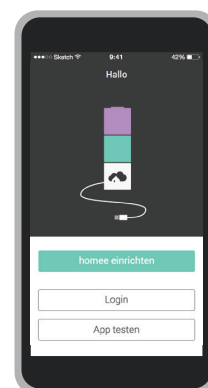

Connect your smartphone with homee’s Wi-Fi

Your homee Brain Cube has its own Wi-Fi. To set it up, you firstly need to connect your smartphone to this Wi-Fi network. Go to your smartphones network settings and connect to the homee Wi-Fi.

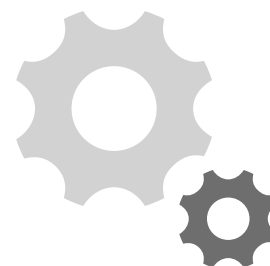



MACO Homee set-up

Scan or enter your homee ID

On the underside of your Brain Cube, you will find your homee's ID. You can either enter the ID number in the homee app, or you can scan the QR Code with a simple click of your camera button.

Create your user ID

For your new homee, you will need to create a new user ID. This user is automatically the Administrator, so don't forget your login information!

Connect homee to your home's Wi-Fi network

You can now, with the homee app, connect your homee to your local Wi-Fi network. Select your Wi-Fi network and enter your password/network key.

If you wish to use homee without internet access, then click the link at the bottom of the screen and activate standalone mode. You can also do this at any time using the settings in your app.

Note, when homee is in standalone mode, you can only reach it when you are at home.

Customize your homee

If you want to, your homee can now be personalised, just choose an icon for your homee and give it a name.



homee ID

