

INSTINCT by MACO

SYSTEM FOLDER – AluK TRITON PIVOT DOOR – IN FRAME





maco.eu/instinct

Table of contents

Important information	3
Profile details and matching components	4
Basic design and tolerances	5
Recommended positioning	6 - 7
Milling images	8 - 15
Basic adjustment of the striker plate	16 - 17
Cabling overview	18
Emergency release positions	20 - 21
Emergency release drill pattern	22 - 23



Important information

To assemble and install the INSTINCT by MACO system, you need the following documents:

- > Operating and maintenance instructions
- > System folder for the corresponding door profile
- > Assembly instructions

Operating and maintenance instructions

The operating and maintenance instructions contain important information on project planning, installation, commissioning, operation and maintenance of the INSTINCT by MACO system. This document must be handed over to the client/end user in the course of delivery.

System folder

The system folder contains profile-specific information on the milling and drilling patterns as well as information and notes on cable installation in the profile. In addition, please also note the fabrication guidelines of the profile manufacturer!

Assembly instructions

The assembly instructions contain profile-independent information for correct assembly of the INSTINCT by MACO system. These instructions include the work steps in the factory and the work steps on the construction site.

Profile details and matching components

PROFILE SYSTEM

Installation of the closures: In the frame profile

Opening direction: Opens inwards

Tested sash profile: AluK Triton P-03-B302

Tested frame profile: AluK Triton P-03-P102

Tested interchangeable profile: AluK Triton P-03-P405

MATCHING COMPONENTS

Matching closures: Housing shape A - Part No. 501_1_

Matching closure covers: Part No. 50211_

Recommended screw type(s): 4 x Heco Topix-plus plank screw LKO

4.0x 70

Matching striker plates: Aluminium - 20 mm wide - Part No. 503311

Matching striker plate covers: Part No. 504311

Recommended screw type(s): 4 x Heco Topix-plus plank screw LKO

4.0x 70

Recommended cover profile

(profile manufacturer): No cover profile required

MINIMUM SASH WIDTH

Minimum width per side: ≥ 200 mm



Basic design and tolerances

Basic setting of the locking cam:	9 mm	DESIGN
Basic design of the rebate gap:	12 mm	& TOLERANCES
Minimum rebate gap:	≥ 10 mm	
Maximum rebate gap:	≤ 14 mm	
	to door hinges with standard turning curves. Pasic setting of the locking cam may have to be	
Reducing the minimum rebate gap	(by tightening the locking cam screw) is:	MINIMUM REBATE GAP
Possible		
IMPORTANT: The maximum rebate gap is reduce	ed by tightening the locking cam screw.	
Increasing the minimum rebate ga	p (by loosening the locking cam screw) is:	MAXIMUM DEBATE CAD
☑ Possible	☐ Not possible	REBATE GAP
IMPORTANT: The minimum rebate gap is increas	sed by loosening the locking cam screw.	

Recommended positioning

DIN L

RECOMMENDED CONFIGURATION*

In the minimum configuration, 3 closures are recommended. From a door height of 2500 mm, 4 closures are recommended. An additional horizontal closure is optional.

EXAMPLE DISTANCES*

Door height	Qty	L1	L2	
2000	3	240	760	
2100	3	240	810	
2200	3	240	860	
2300	3	240	910	
2400	3	240	960	
2500	4	240	673	
2600	4	240	706	
2700	4	240	740	
2800	4	240	773	

*Figures in mm.


Table valid for DIN L and DIN R.
The values in this table are examples and serve as guidance for the installation of the INSTINCT closures.

Calculation for L2 with 3 Closures:

 $\frac{\text{Door height - (2 x L1)}}{2}$

Calculation for L2 with 4 Closures:


Door height - $(2 \times L1)$

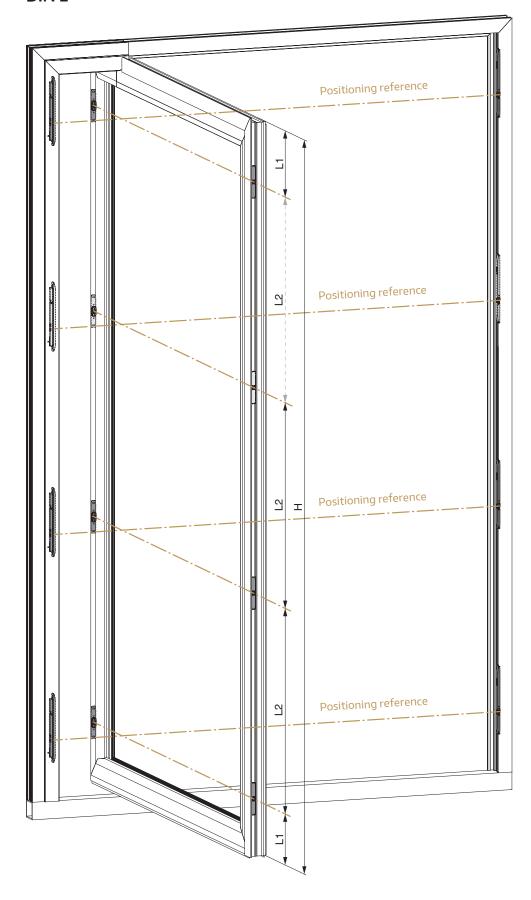



Recommended positioning

DIN R

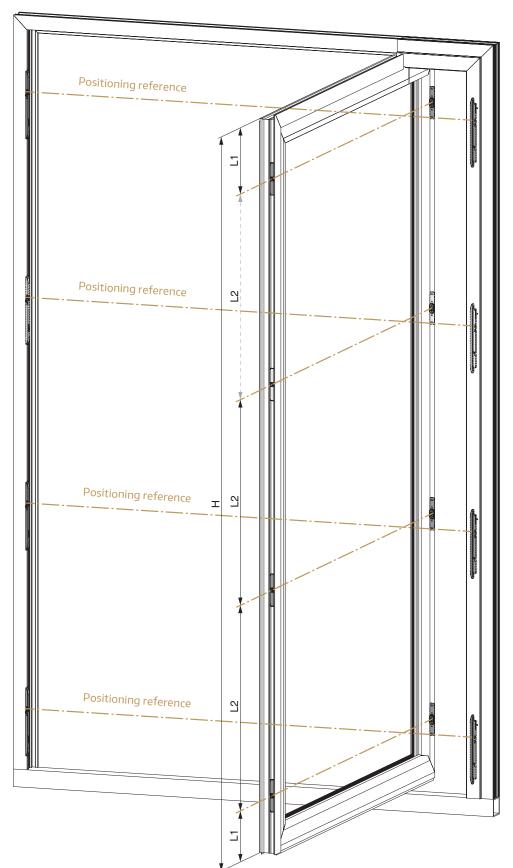

RECOMMENDED CABLE LENGTHS*

L2	Cable length	Item number
L2 ≤ 400	600	509006
L2 ≤ 500	700	509007
L2 ≤ 600	800	509008
L2 ≤ 700	900	509009
L2 ≤ 800	1000	509010
L2 > 800	1100	509011


*Figures in mm

The required cable lengths may differ depending on the position of the cable routing.

For the integration of the INSTINCT Bluetooth module or the INSTINCT interface, system cables with a length of 200 (Part No. 509002), 300 (Part No. 509003) or 500 mm (Part No. 509005) are available. A system cable with a length of 2500 mm (Part No. 509025) is also available to connect the closures on both sides. The detailed cabling


The detailed cabling scheme can be found on page 18.

Milling pattern top view – long side DIN R, M 1:2

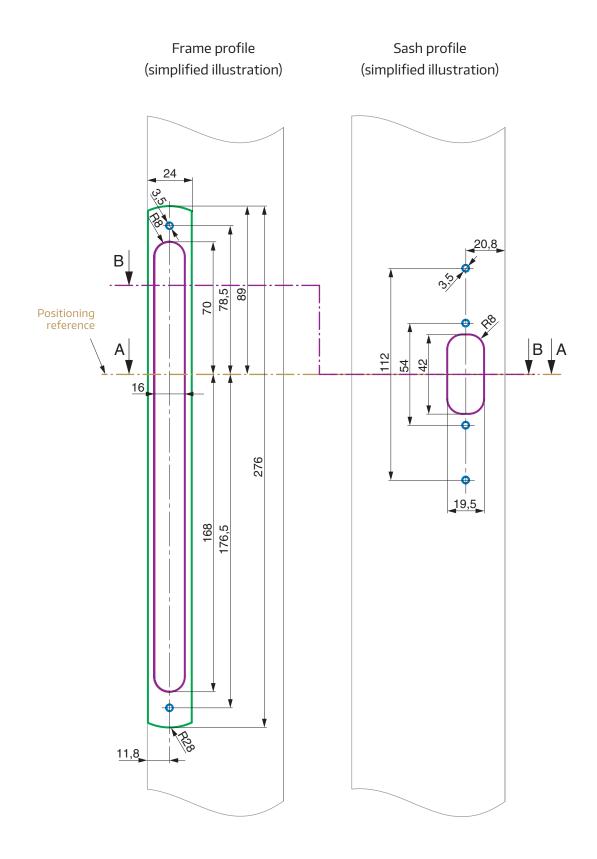




Milling pattern cross-section B-B – long side DIN R, M 1:1

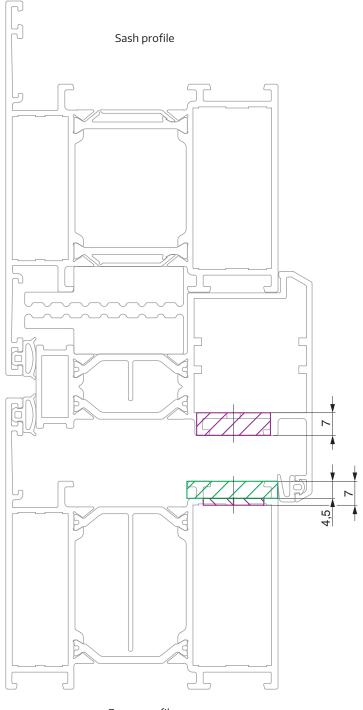


Frame profile

Milling pattern top view – short side DIN R, M 1:2

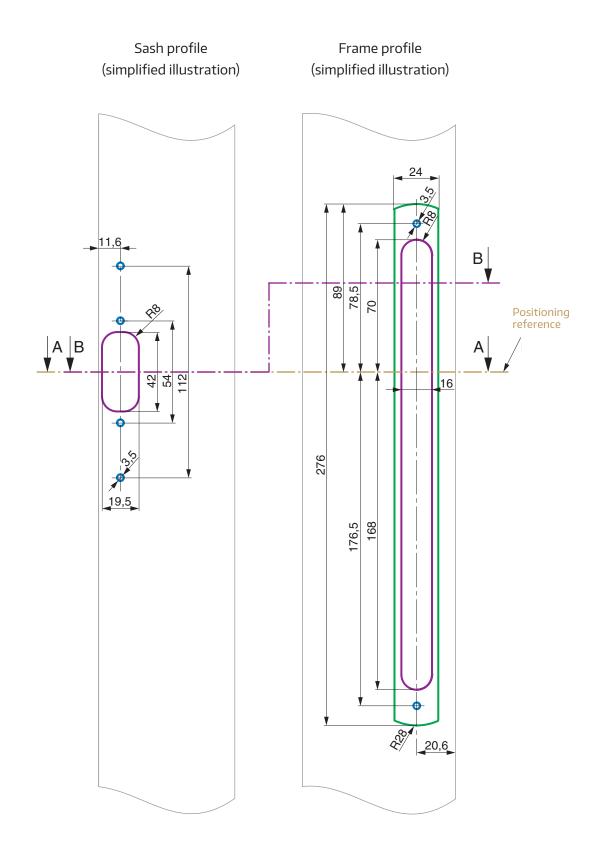




Milling pattern cross-section B-B – short side DIN R, M 1:1

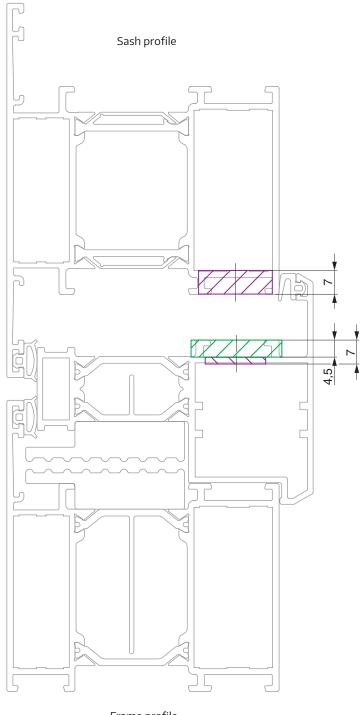


Frame profile

Milling pattern top view – long side DIN L, M 1:2

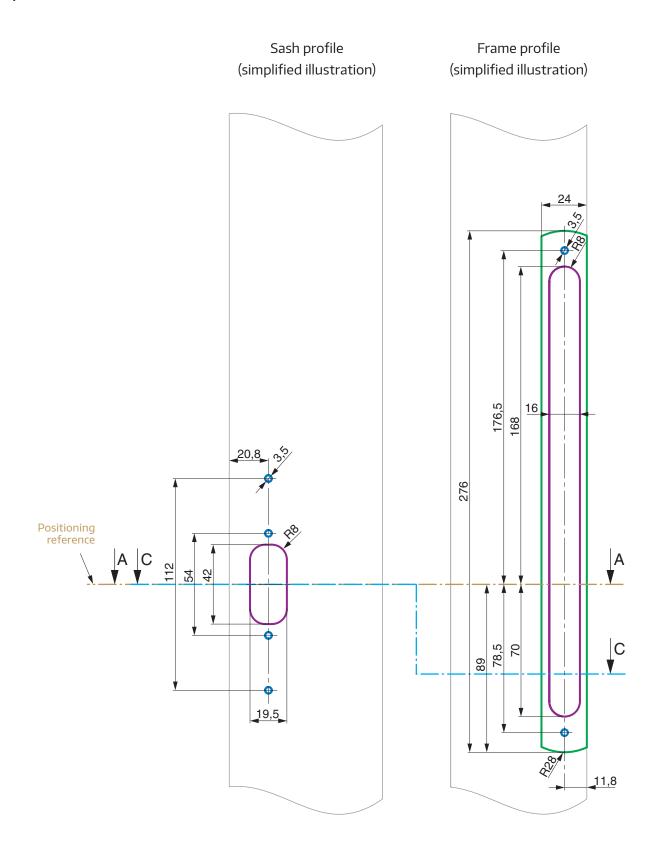




Milling pattern cross-section C-C – long side DIN L, M 1:1

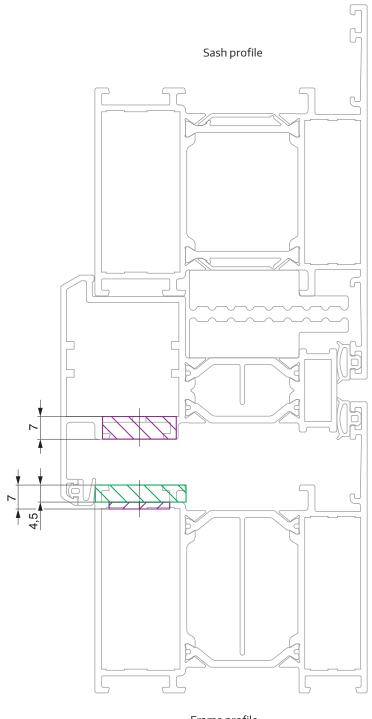


Frame profile

Milling pattern top view – short side DIN L, M 1:2

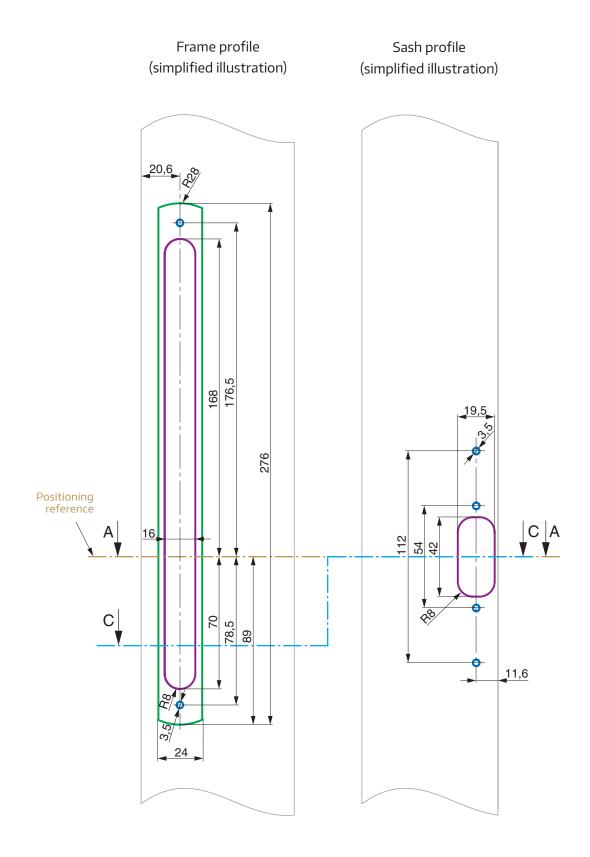




Milling pattern cross-section C-C – short side DIN L, M 1:1

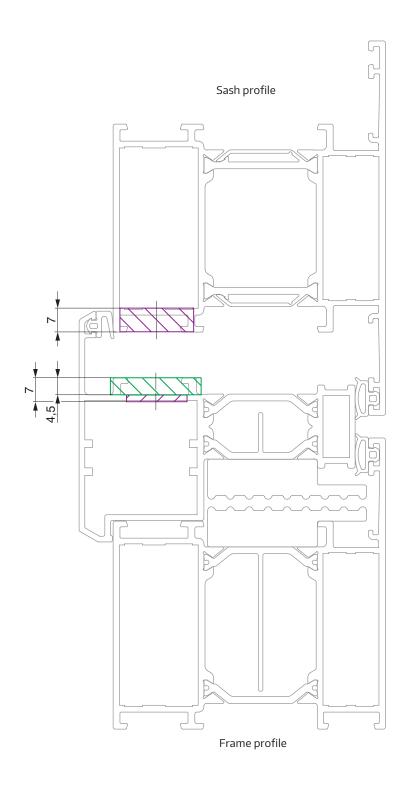


Basic adjustment of the striker plate – long side Cross-section A-A, M 1:1

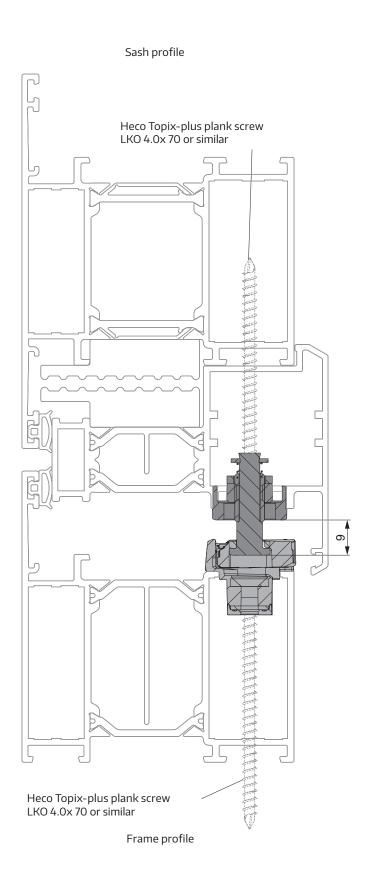



Basic adjustment of the striker plate – short side Cross-section A-A, M 1:1

Sash profile

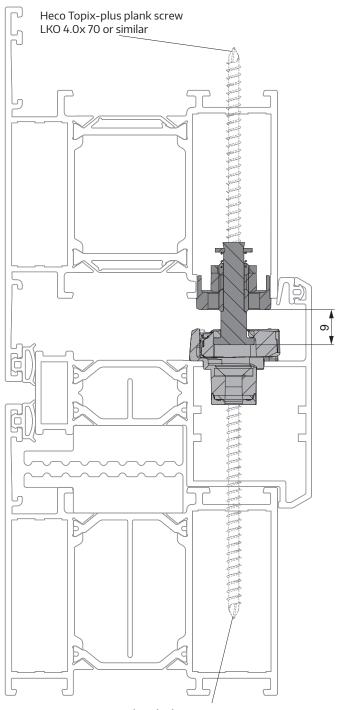

Heco Topix-plus plank screw LKO 4.0x 70 or similar


Frame profile

Cabling overview

For vertical closure points

NOTE

The cables are routed through a cable duct in the door frame.

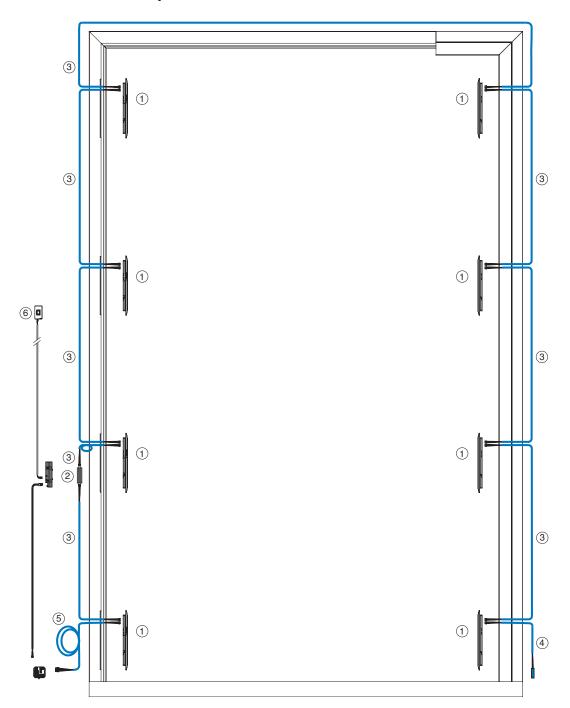

- 1) INSTINCT Guard/Guard+
- (2) INSTINCT Bluetooth module
- (3) INSTINCT system cable
- (4) INSTINCT connection cable (with or without acoustic module)
- (5) INSTINCT system cable for frame-side mounting 6000 mm
- (6) MACO openDoor Touchkey dLine / MACO openDoor Keypad


Notes			

Emergency release positions left DIN L

NOTE

In the event of a defect, it is possible to mechanically open each individual locking point from the inside via an Emergency Release.

For this purpose, the unlocking tool (Part No. 509520) as well as an Allen key with ball head (4 mm) is required.

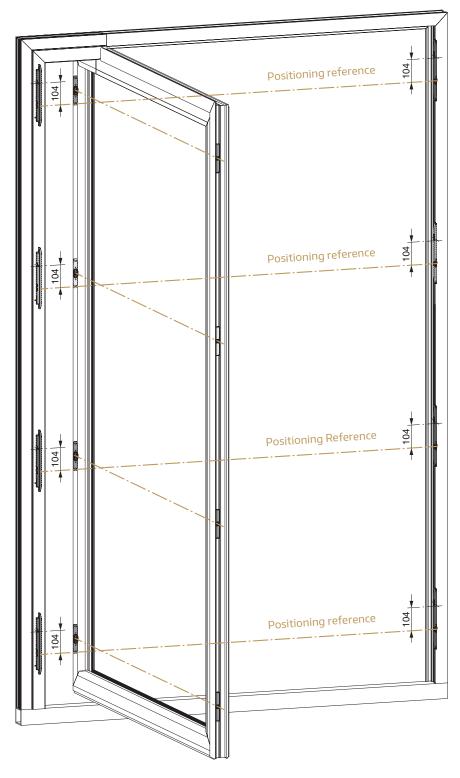

Direction of rotation for emergency release:





Emergency release positions right DIN L

Positioning reference Positioning reference Positioning reference Positioning reference

Direction of rotation for emergency release:



NOTE

In the event of a defect, it is possible to mechanically open each individual locking point from the inside via an emergency release.


For this purpose, the unlocking tool (Part No. 509520) as well as an Allen key with ball head (4 mm) is required.


Emergency release drill pattern – long side

NOTE

In the event of a defect, it is possible to mechanically open each individual locking point from the inside via an emergency release.


For this purpose, the unlocking tool (Part No. 509520) as well as an Allen key with ball head (4 mm) is required.

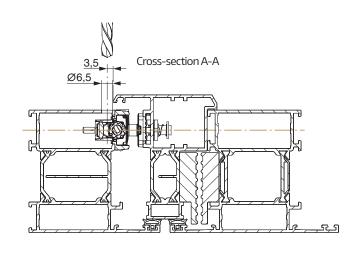


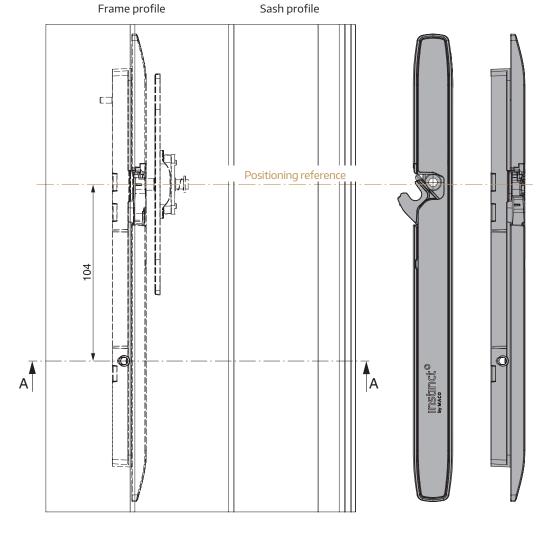



Emergency release drill pattern – short side

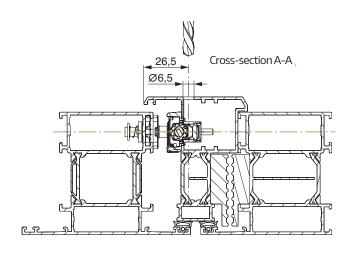

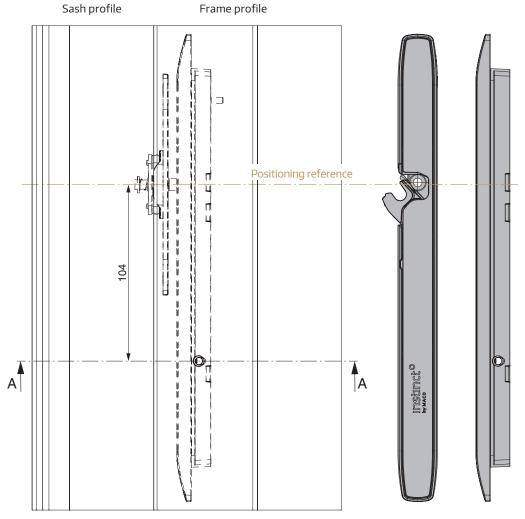

NOTE

In the event of a defect, it is possible to mechanically open each individual locking point from the inside via an emergency release.

For this purpose, the unlocking tool (Part No. 509520) as well as an Allen key with ball head (4 mm) is required.

www.maco.eu/contact

Alpenstraße 173 · 5020 Salzburg · Austria T: +43 662 6196-0 · F: +43 662 6196-1449

maco@maco.eu · maco.eu



This document is updated continuously. The current version can be found at https://www.maco.eu/assets/759967 or scan the QR code.

Created: 04/2024 Order No. 759967 All rights and modifications reserved.

"> If I had asked people what they wanted, they would have said faster horses.

Henry Ford

